



ANVIL

MWA1800

Commercial Microwave Oven

**Installation, Operation
and Care Manual**

MANUFACTURING
SINCE 1966

THE CHEFS COMPANION

Anvil imported and distributed by

International Catering Equipment
Unit B2, 6-10 Durdans Avenue, Rosebery NSW 2018 Australia
Ph: +61 2 8372 0800
www.internationalcatering.com.au

**Before operating this oven, please
read these instructions completely.**

**For service enquiries please contact either your supplier
or International Catering Equipment on (02) 8372 0800.**

**Please examine the oven after
unpacking to ensure no damage has
occurred in transit.**

In particular to the door and power lead.

TABLE OF CONTENTS


Specifications	1
Precautions to avoid possible exposure to excessive microwave energy	1
Installation	2
Stacking Ovens	2
Power Supply Requirements	3
Features diagram	3
Oven Operation	5
Manual Heating	6
Multi-Stage Cooking	6
Defrosting	7
Preset Memory function	8
Changing Preset Memory Settings	9
Double/Triple Quantity Function	9
Custom User Settings	10
Changing Custom User Settings	11
Restoring Factory Default Settings	11
Caring for your Microwave Oven	12
Splash Shield Cleaning	12
Air Filter Cleaning	13
Air Filter Cleaning Reminder	13
Safety and Usage Guidelines	14
Microwaving principles	15
Usage Tips	16
Arcing	16
Before you call for service	17
Disposal of used electrical & electronic equipment	17



SPECIFICATIONS

POWER SUPPLY		230V~240V, 50Hz
MICROWAVE	POWER CONSUMPTION	3000 W
	OUTPUT POWER	1800 W
	CURRENT INPUT	13 amps
	FREQUENCY	2450 MHZ
OUTSIDE DIMENSIONS (W x H x D)		420mm x 563mm (includes handle) x 340mm
CAVITY DIMENSIONS (W x H x D)		330mm x 310mm x 175mm
NET WEIGHT		APPROX. 29.3 Kg
POWER POINT REQUIRED		15amp, Single Phase

* Specifications are subject to change without notice.

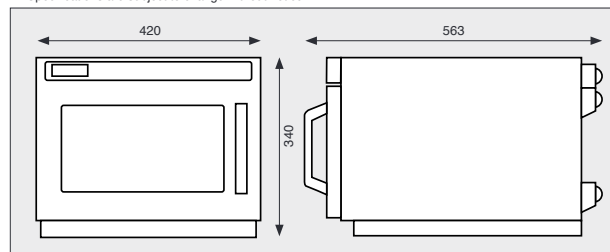

Precautions To Avoid Possible Exposure to Excessive Microwave Energy

- DO NOT ATTEMPT TO OPERATE THIS OVEN WITH THE DOOR OPEN.** It is important that the safety interlocks are not tampered with or modified as this may result in harmful exposure to microwave energy.
- Do not** place any object between the inside of the oven door and the front fascia of the cavity opening that may prevent the door from closing properly. Do not allow food, grease or spills to accumulate in this area as this may also prevent the oven door from closing correctly.
- Should any** part of the oven door, door seals, hinges or latches be damaged the oven must not be operated until it has been repaired by a recommended qualified agent.
- It is hazardous** for anyone that is not a qualified service agent to carry out any service work on this oven. Please contact the oven supplier for your nearest qualified agent.
- Please read** user instructions prior to using this oven and ensure all users are trained in the safe operation of the oven.